

## ECOSOL MAX 2 White Upgrade

This manual explains the procedure to upgrade from ECOSOL MAX White ink to ECOSOL MAX 2 White ink



## Work Flow

### 1. Perform Test Print & Manual Cleaning

Clean the machine to ensure best print quality



### 2. Check Firmware Version & Firmware update

Update the firmware version



### 3. Ink change

Process to change the cartridge to MAX 2 White



### 4. Perform Nozzle Check

Check Nozzle Condition

## 1. Test print & Manual Cleaning

Perform a Printing Test to check the condition of the head.

1 Press **FUNCTION**.

2  Press **▼** to display the left figure.  
Press **▶**.


3  Press **ENTER**.  
A test pattern is printed.



### Perform Manual Cleaning


1 Remove any media.


2 Press **MENU**.

3  Press **▼** several times until the screen shown on the left appears.  
Press **▶**, and then **▲**.

4  Press **▶**.


5  Press **ENTER**.

6  When the screen shown on the left appears, open the cover L.

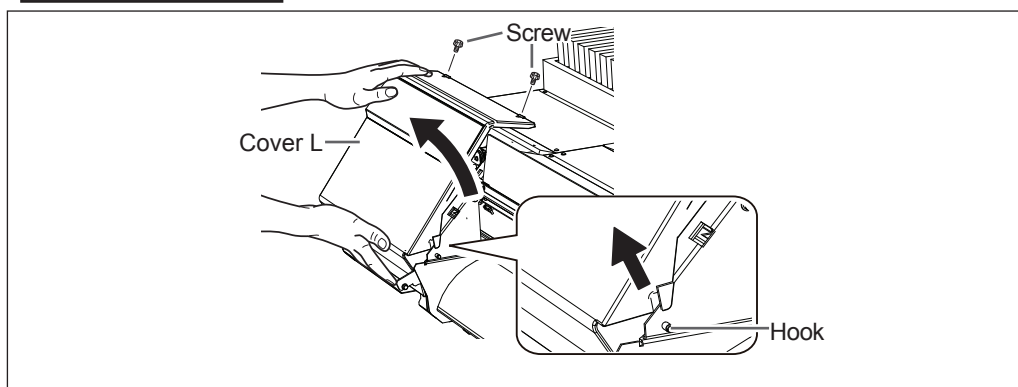

REMOVE  
CUTTING RAIL ↵


**Remove the cut rail.**  
Press **ENTER**.

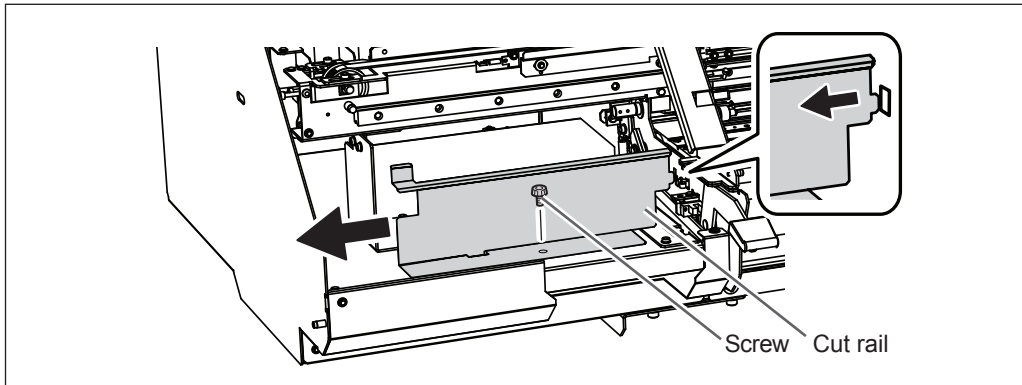

7

CLOSE COVER L

**Close the cover L.**

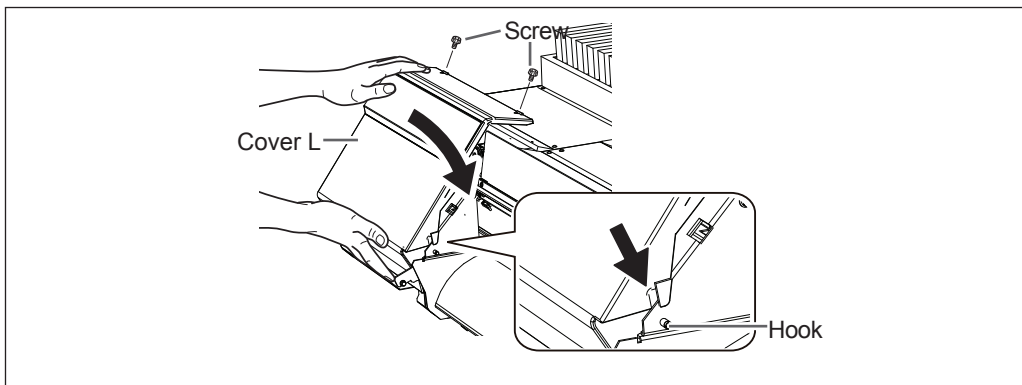

8

CLOSE FRONT  
COVER

**Close the front cover.**

The print-head carriage moves to the left side of the machine, and then the screen shown in the figure appears.

9

OPEN COVER L


**Open the cover L.**

FINISHED?  
↵

Preparations are complete when this screen appears.

## 2. Clean using the cleaning stick.


1

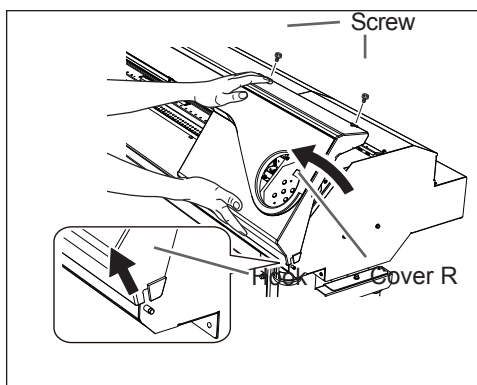

**Remove the cover R.**

### 3. Clean using the cleaning stick.


2

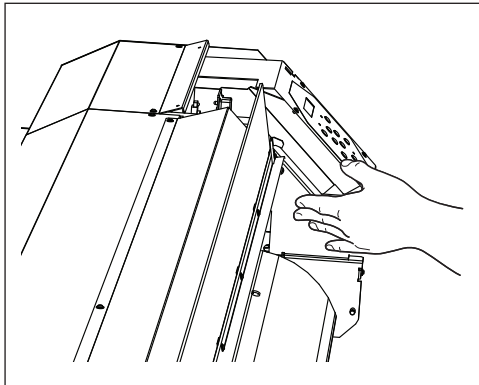

Touch the location shown in the figure to discharge any static electricity.

### 3. Clean using the cleaning stick.

1

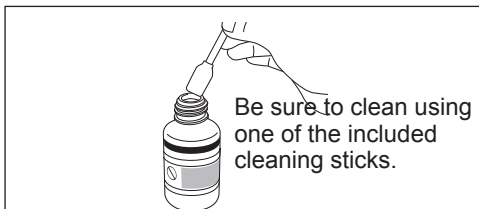


Moisten the cleaning stick with the cleaning liquid.

2 **Check that the cut rail has been detached.**

If the cut rail is not detached, close all the covers and restart the operation from the beginning. If you continue the operation as the cut rail remains attached, the print head might get broken.


3 **Perform cleaning in the sequence shown in the figure below.**

Be especially careful to clean away any fibrous dust (lint).

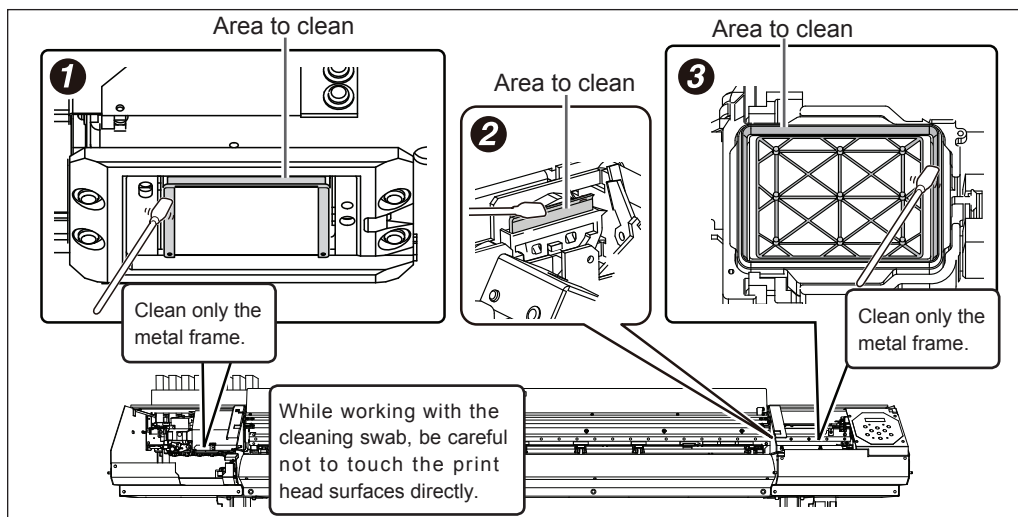


## 4. Reattach cover L, cover R, and Quit the manual cleaning menu.

1

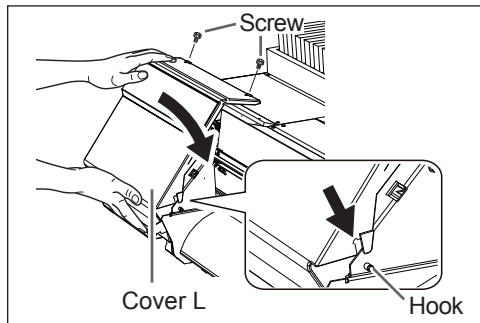

Attach the cover L.

2

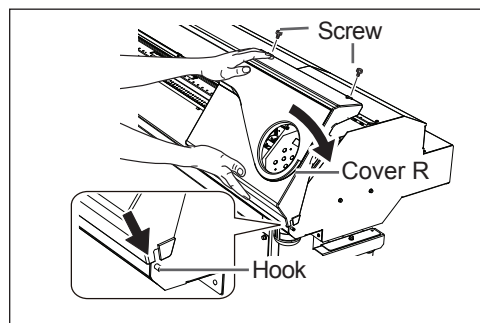

Attach the cover R.

3 Close the front cover if it is open.

4 Press **ENTER**.

5 OPEN COVER L


The print-head carriage moves to the right side of the machine, and then the screen shown in the figure appears.

Open the cover L.

6 REPLACE CUT RAIL

Replace the cut rail.

Press **ENTER**.

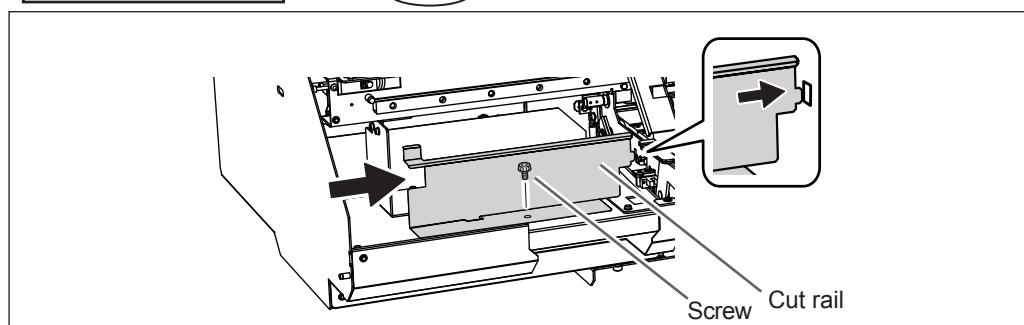

7 CLOSE COVER L

Attach the cover L.

CLEANING...  
>>

The screen shown in the figure appears and cleaning starts. When it finishes, the screen shown in the figure appears again.

MAINTENANCE  
CLEANING

8 W1200mm  
SETUP SHEET

Press **MENU** to go back to the original screen.

## 5. Perform a printing test to verify the results of the procedure.

Perform a Printing Test to check the condition of the head.

1 Press **FUNCTION**.

2 


FUNCTION	◀▶
CLEANING	▶

 Press **▼** to display the left figure.  
Press **▶**.

3 

CLEANING	◀▶
TEST PRINT	↵



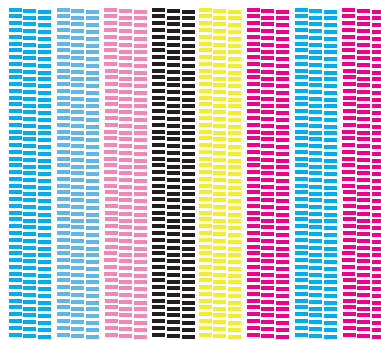






 Press **ENTER**.  
A test pattern is printed.



## 2. Check Firmware Version & Perform Firmware Upgrade



In order for the upgrade to be enabled the firmware version needs to be the latest version.
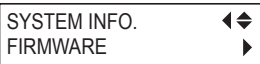
### To Check Firmware Version


- 1 Press .
- 2  Press  several times until the screen shown on the left appears.  
Press .
- 3  Press  several times until the screen shown on the left appears.
- 4  Press .
- 5  Confirm firmware version, if on version 4.80 or above move to Step 3, if not follow the procedure to upgrade the firmware

### To upgrade the firmware version

- 1 Turn on Main Power Switch and Turn Off Sub Power Switch
- 2 Double Click on the Firmware Installer to run the update
- 3 If the printer model is shown Click Next, if not fill in the printers IP address, then Click Next

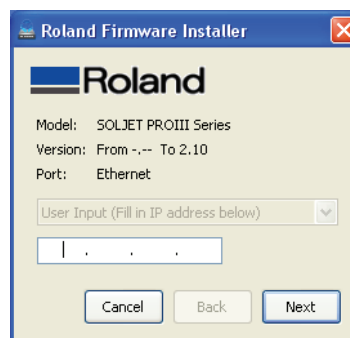
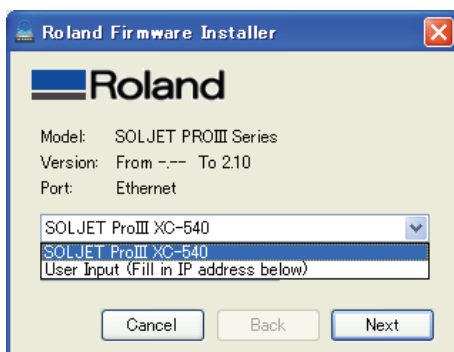


- 4 Check the model name and IP address are correct, then Click Install

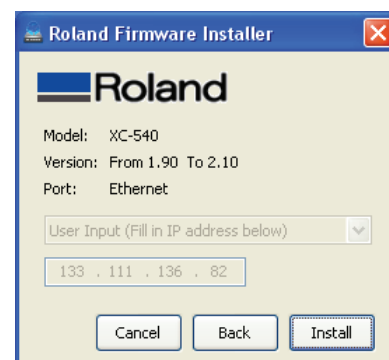




- 5 The firmware update will then proceed

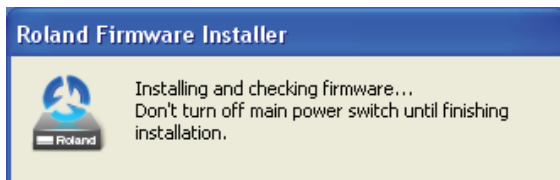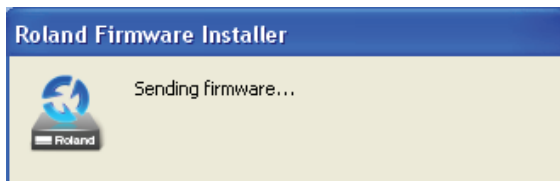

Do not turn the machine off or press the power button during the update.

- 6 The firmware update will then complete

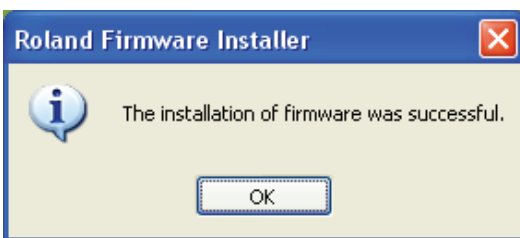

### 3. Ink Changeover

For the ink change please ensure that you have a replacement ECOSOLMAX 2 White cartridge

- 1 When ready remove the ECOSOL MAX White cartridge
- 2 Insert the ECOSOL MAX2 White cartridge
- 3 Check the Drain Bottle and empty it
- 4 Perform Ink Renewal

1 Press **MENU**.



Press **▼** several times until the screen shown on the left appears.

Press **▶**.



Press **▼** several times until the screen shown on the left appears.

Press **ENTER**.

- 5 Again check the Drain Bottle and empty it if necessary

### 4. Test print

Finally perform a Printing Test to check the condition of the head and to confirm the upgrade.

1 Press **FUNCTION**.



Press **▼** to display the left figure.

Press **▶**.



Press **ENTER**.

A test pattern is printed.

